


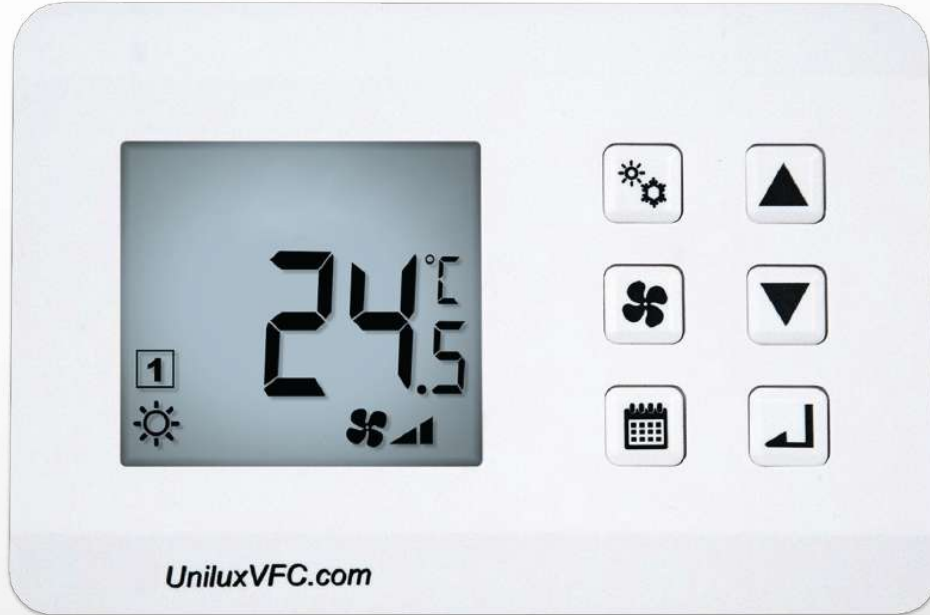

# Unilux Standard AM Thermostat






## User Manual



## Turning System On & Off

- 1 Press **System** to toggle between on and off  
Note: This turns the fan on and off.

## Choose Operating Mode

- 1 Hold **System** button for 2 seconds
- 2 Using Up and Down, select heat , cool , or auto 
  - a. Press **Enter**

Auto mode will automatically change your fan coil from heating to cooling and back when the seasons change.

## Changing Temperature

- 1 Press Up or Down to your desired temperature
  - a. Press **Enter**

Note: You must already be in your selected hold - either permanent or vacation hold. The thermostat was put in a permanent hold at the time of installation by the installer.

## Select Fan Speed

- 1 Press Fan until you reach your desired setting – low, medium, high & auto

Auto fan will adjust your fan speed based on the difference between the set temperature and room temperature. The farther away set temperature is from room temperature, the faster the fan will run.

## Setting a Vacation Hold

Set Vacation Hold (HOLD) when you're away on vacation to save energy. Program your unit to work less for the duration of your vacation. When the timer expires, it returns to permanent hold. The HO symbol indicates the thermostat is in hold.

- 1 Press **Program** for 2 seconds
- 2 Using up and down, put the system into Vacation Hold (HOLD)
  - a. Press **Enter**
- 3 Select your temperature setting with Up and Down
  - a. Press **Enter**
- 4 Using Up and Down, select the number of days you'll be away
  - a. Press **Enter**

## Setting a Permanent Hold

To switch back from vacation hold, set a permanent hold (P.od) when you are in your suite. Permanent hold maintains a consistent temperature setting at all hours of the day. The P symbol indicates the thermostat is in permanent hold.


- 1 Press **Program** for 2 seconds
- 2 Using up and down, put the system into Permanent Hold (P.od)
  - a. Press **Enter**
- 3 Select your temperature setting with Up and Down
  - a. Press **Enter**

## Temperature Display Settings

Choose either Celsius or Fahrenheit temperature display.

- 1 Hold System and Program at the same time
- 2 Using up or down, select C or F and Press Enter



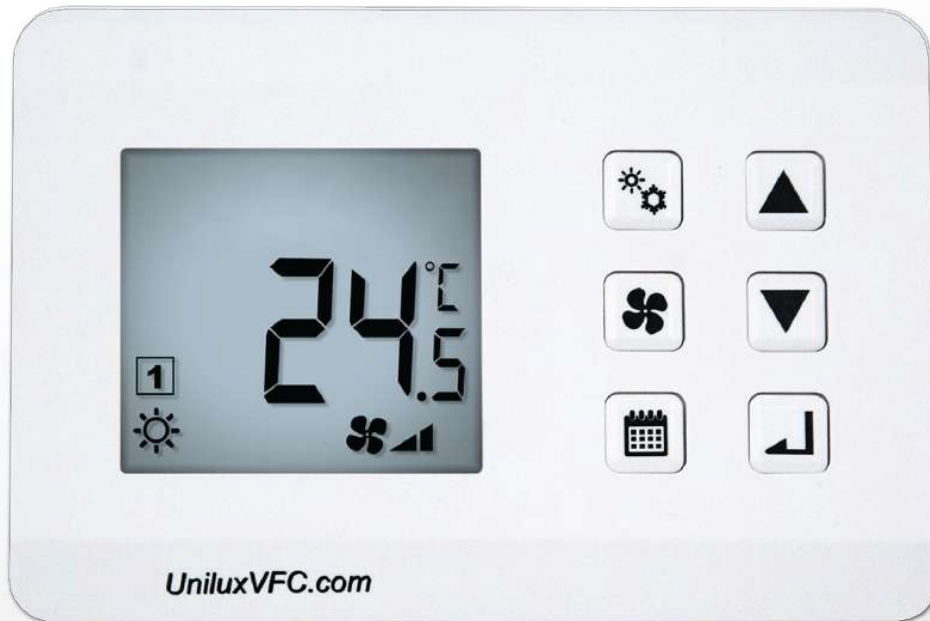

## Date & Time Settings

Set the date and time for your thermostat display.

- ① Hold System and Up at the same time
- ② Select Yes
- ③ Choose your day of the week using the number across the top
  - a. Press [Enter](#)
- ④ Choose the hour
  - a. Press [Enter](#)
- ⑤ Choose the minutes
  - a. Press [Enter](#)

## Freeze Protection Mode

When room temperature drops below 41F (5C) the fan is forced to low speed all water valves open to help prevent freezing. The snowflake defrost icon ❄️ will appear on the screen.

## Battery Back-Up

The thermostat is equipped with a back-up battery to maintain all settings in the event of a power surge.